




GENERAL

This product contains a light source of energy efficiency class (TRLEDA151: D / TRLEDA221: E) to Regulation (EU) No. 2019/2015 and (UK) 2021 No. 1095.

This product contains a non-replaceable LED light source and a control gear which can be replaced by a professional.

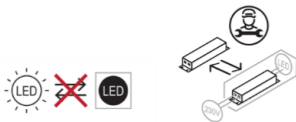

Clean with a soft dry cloth only, do not use aggressive cleaning products or solvents which may damage the product.

Do not use any source of high-pressure washers to maintain or clean this luminaire.

This product is non-dimmable.

This product should be dismantled for disposal when it reaches the end of its life. Please see website for dismantling instructions.

This product should be recycled in the correct manner when it reaches the end of its life. Check local authorities for where facilities exist.

WARRANTY

This product has a warranty of 5 years from date of purchase. Failure to install this product in accordance with the current edition of the IEE Wiring Regulations (BS7671), improper use, or removal of the batch code will invalidate the warranty. If this product should fail within its warranty period, it should be returned to the place of purchase for a free of charge replacement. ML Accessories does not accept responsibility for any installation costs associated with the replacement product. Your statutory rights are not affected. ML Accessories reserve the right to alter product specification without prior notice.

SUPPLIED BY:
(UK) MANUFACTURER
ML ACCESSORIES LTD, UNIT E CHILTERN PARK,
BOSCOMBE ROAD, DUNSTABLE LU5 4LT,
WWW.MLACCESSORIES.CO.UK

(EU) AUTHORISED REPRESENTATIVE
SLV LIGHTING GROUP,
DAIMLERSTRASSE 21-23,
52531 ÜBACH-PALENBERG, GERMANY
EMAIL: EPREL@GROUP.SLV.COM
MADE IN CHINA

230V
50Hz

110V



IP65



-20~
35°C
TA

>80
CRI

ML
ACCESSORIES LTD



UK
CA



52



INSTALLATION & MAINTENANCE MANUAL

TRLEDA151/TRLEDA221

JBOCT23_V1



GENERAL INSTRUCTIONS

These instructions should be read carefully and retained after installation by the end user for future reference and maintenance.


These instructions should be used to aid installation of the following product(s):
TRLEDA151/TRLEDA221

SAFETY

- This product must be installed in accordance with the latest edition of the IEE Wiring Regulations (BS7671) and current Building Regulations. If in any doubt, consult a qualified electrician
- Please isolate mains prior to installation or maintenance
- Check the total load on the circuit (including when this luminaire is fitted) does not exceed the rating of the circuit cable, fuse or circuit breaker
- Please note the IP (Ingress Protection) rating of this product when deciding the location for installation
- This product is Class I and must be earthed
- This product is IP65 rated

INSTALLATION

- Note** - If this product is being used in conjunction with an external PIR or sensor, please confirm with the manufacturer of the sensors that they are compatible with LED luminaires.
- Provide power to the required point of installation (refer to BS7671 for correct cabling methods). Suitable IP rated junction boxes should be used where required
 - Using the mounting bracket as a template, mark the location for, and drill the fixing holes ensuring not to infringe with any gas/water pipes or electrical cables. Fixing centres are shown in Fig. 1

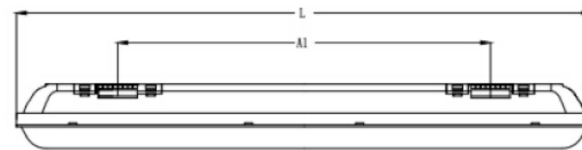

	L (mm)	L (ft)	A1 (mm)
TRLEDA151	1583	5	1000
TRLEDA221	653	2	390

Fig. 1

- Secure the mounting brackets to the surface using suitable fixings (not included)
- Unfasten the clips on either side of the fitting (see Fig. 2)



Fig. 2

- Remove the gear tray from the baseplate by pinching the clips at two locations (see Fig. 3)

 


Fig. 3

- Feed the mains cable through the compression gland provided at the end of the fitting
- Tighten the compression gland ensuring a tight seal is made
- Connect the luminaire to the mains supply ensuring the correct polarity is observed: L – Live (brown), E – Earth (green/yellow), N – Neutral (blue) (see Fig. 4)



Fig. 4

- Tighten the compression gland ensuring a tight seal is made
- Align the fitting with the mounting brackets and clip into place
- Replace the gear tray and diffuser ensuring all clips are fastened securely
- Switch on and check for correct operation

WARNING

This product must be disconnected from the circuit if subjected to any high voltage or insulation resistance testing. Irreparable damage will occur if this instruction is not followed.