

INSTALLATION & MAINTENANCE MANUAL

RWL2A / RWL2W / RWL5A / RWL5W

#### **GENERAL INSTRUCTIONS**

These instructions should be read carefully and retained after installation by the end user for future reference and maintenance.

These instructions should be used to aid installation of the following products: RWL2A / RWL2W / RWL5A / RWL5W

### **SAFETY**

- This product must be installed in accordance with the latest edition of the IEE Wiring Regulations (BS7671) and current Building Regulations. If in any doubt, consult a qualified electrician
- · Please isolate mains prior to installation or maintenance
- Check the total load on the circuit (including when this luminaire is fitted) does not exceed the rating of the circuit cable, fuse or circuit breaker
- · Please note the IP (Ingress Protection) rating of this product when deciding the location for installation
- · This product is Class II double insulated
- · This product is IP54 rated


### **INSTALLATION**

Note - If this product is being used in conjunction with an external PIR or sensor, please confirm with the manufacturer of the sensors that they are compatible with LED luminaires.

- Provide power to the required point of installation (refer to BS7671 for correct cabling methods). Suitable IP rated junction boxes should be used where required
- Remove the two screws at either end of the fitting which secure the baseplate to the luminaire (see Fig. 1)

Fig. 1

- Using the baseplate as a template, mark the location for, and drill the fixing holes ensuring not to infringe with any gas/water pipes or electrical cables
- · Secure the baseplate to the surface
- Remove the screws securing the terminal housing (see Fig. 2)

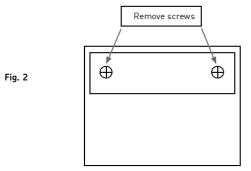

- · Feed the mains cable through the rubber grommet to retain IP rating
- Connect the luminaire to the mains supply ensuring the correct polarity is observed (see Fig. 3): L Live (brown), N - Neutral (blue)

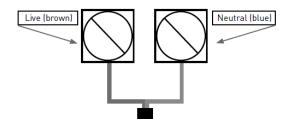


Fig. 3

- · Fasten the terminal housing screws
- Secure the fitting to the baseplate and fasten the two fixing screws
- · Switch on and check for correct operation

# **WARNING**

This product must be disconnected from the circuit if subjected to any high voltage or insulation resistance testing. Irreparable damage will occur if this instruction is not followed.

This product is not suitable for installation in or near a coastal or marine environment.

# **GENERAL**

This product contains a light source of energy efficiency class F (RWL2x) / D (RWL5x) to Regulation (EU) No. 2019/2015.

This product contains an LED light source and a control gear which can be replaced by a professional.



Clean the external surfaces with a damp cloth using a mild solution of detergent and warm water only, do not use aggressive cleaning products or solvents which may damage the product.

Do not use any source of high-pressure washers to maintain or clean this luminaire.

It is recommended to add a bead of clear silicone around the product to aid the IP rating if installed in an exposed outdoor location.

This product is non-dimmable.

This product should be dismantled for disposal when it reaches the end of its life. Please see website for dismantling instructions.

This product should be recycled in the correct manner when it reaches the end of its life. Check local authorities for where facilities exist.

### **WARRANTY**

This product has a warranty of 3 years from date of purchase. Failure to install this product in accordance with the current edition of the IEE Wiring Regulations (BS7671), improper use, or removal of the batch code will invalidate the warranty. If this product should fail within its warranty period, it should be returned to the place of purchase for a free of charge replacement. ML Accessories does not accept responsibility for any installation costs associated with the replacement product. Your statutory rights are not affected. ML Accessories reserve the right to alter product specification without prior notice.













ML Accessories Limited LU5 4LT www.mlaccessories.co.uk