



INSTALLATION & MAINTENANCE MANUAL

CU9R

GENERAL INSTRUCTIONS

These instructions should be read carefully and retained after installation by the end user for future reference and maintenance.

**These instructions should be used to aid installation of the following product:
CU9R**

SAFETY

- This product must be installed in accordance with the latest edition of the IEE Wiring Regulations (BS7671) and current Building Regulations. If in any doubt, consult a qualified electrician
- Please isolate mains prior to installation or maintenance
- Check the total load on the circuit (including when this product is fitted) does not exceed the rating of the circuit cable, fuse, or circuit breaker
- Please note the IP (Ingress Protection) rating of this product when deciding the location for installation
- Do not overload this accessory or subject it to conditions outside its rating
- This product is for indoor use only
- This product is Class I and must be earthed
- This product is IP20 rated

INSTALLATION

- Always ensure the wall surface is flat and smooth for optimum installation
- Provide power to the required point of installation
- Connect the socket to the mains supply ensuring the correct polarity is observed (see Fig. 1): L – Live (Brown), E – Earth (Green/Yellow), N – Neutral (Blue)

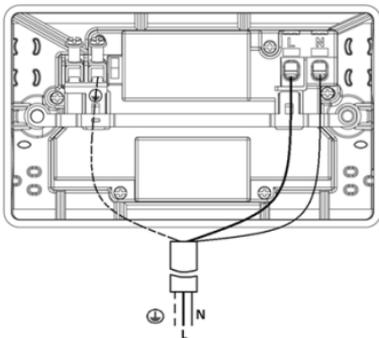


Fig. 1

- An earth connection must be made to the earth terminal of the socket. Use green/yellow sleeving on earth conductors that are not insulated
- Check all electrical connections are secure with no loose strands of cable
- Fit the unit into a suitable wall box taking care not to compress, damage, or trap any cables and secure with the screws provided
- Switch on and check for correct operation

REMOTE CONTROL

To pair a remote control:

- Press the left switch on the socket until the indicator starts flashing, then release
- Press the "A" button on the remote. This will enact the pairing procedure for both sockets

To unpair an existing remote:

- Press and keep the left switch pressed, the indicator will flash and then it will turn off completely

Changing the battery:

- Using a small flat-head screwdriver, remove the cover from the remote and take out the PCB
- Remove the old batteries and insert two new CR2016 batteries (see Fig. 2)

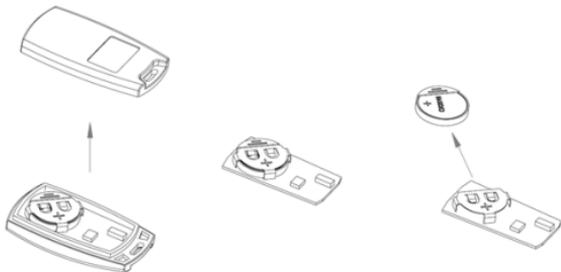


Fig. 2

WARNING

This product must be disconnected from the circuit if subjected to any high voltage or insulation resistance testing. Irreparable damage will occur if this instruction is not followed.

GENERAL

This product should be recycled in the correct manner when it reaches the end of its life. Check local authorities for where facilities exist.

The batteries in the remote are Lithium Ion and must be disposed of correctly. Please contact the local authorities for the disposal of this toxic waste.

Clean with a soft dry cloth only, do not use aggressive cleaning products or solvents that may damage the product.

WARRANTY

This product has a warranty of 2 years (excluding battery) from the date of purchase. Failure to install this product in accordance with the current edition of the IEE Wiring Regulations (BS7671), improper use, or removal of the batch code will invalidate the warranty. If this product should fail within its warranty period, it should be returned to the place of purchase for a free of charge replacement. ML Accessories does not accept responsibility for any installation costs associated with the replacement product. Your statutory rights are not affected. ML Accessories reserve the right to alter product specification without prior notice.



ML
ACCESSORIES LTD



**UK
CA** **CE**



www.mlaccessories.co.uk

Made in China

AVNOV21_V1